



GIDM
INDUSTRIAL / COMMERCIAL
PACKAGED FURNACES
INSTALLATION, OPERATION AND MAINTENANCE MANUAL
(Suitable for Operation with up to 100% Fresh Air)

**READ MANUAL CAREFULLY BEFORE INSTALLING
OR OPERATING THE FURNACE**

FOR YOUR SAFETY

If you smell gas follow these instructions,

- 1) Open windows.
- 2) Do not touch electrical switches.
- 3) Extinguish any open flame.
- 4) Call the gas supplier immediately.

FOR YOUR SAFETY

The use and storage of gasoline or other flammable vapors and liquids in open containers in the vicinity of this appliance is hazardous.

MODEL: _____

SERIAL NUMBER: _____

JOB: _____

DATE OF INSTALLATION: _____

WARNING
IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE CAN
CAUSE PROPERTY DAMAGE, INJURY OR DEATH. PLEASE READ THE
INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTION
THOROUGHLY.

THIS UNIT IS TO BE SERVICED BY QUALIFIED PERSONNEL
****DO NOT TAMPER WITH THE UNIT OR CONTROLS****

INSTALLER'S RESPONSIBILITY

Installer please note: This equipment has been test fired and inspected. It has been shipped free from defects from our factory. However, during shipment and installation, problems such as loose wires, leaks or loose fasteners may occur. It is the installer's responsibility to inspect and correct any problems that may be found.

INSTALLER/SERVICE CONTRACTOR

NAME: _____

ADDRESS: _____

TELEPHONE: _____

CONTACT: _____

RECEIVING AND WAREHOUSING

Inspect the unit upon arrival for any shipping damage. If any part is missing or damaged, notify the carrier at once.

If the unit cannot be installed immediately, store it and its accessories in a clean and dry place.

HANDLING AND SUSPENSION

Do not handle the unit by attaching hooks, jacks or chains to the unit casing or any other component. Spreader bars are recommended when making single point lifts.

Horizontal indoor units may be handled and suspended using the lugs on the base frame.

Horizontal rooftop units are provided with base frame lugs.

Vertical upflow units (including AC model) and vertical down flow models are provided with eye bolts to ease handling.

For all models, the heating and blower sections are shipped separately. (see Fig. 1 for exploded view). Assemble the sections by aligning the pre-drilled flanges and securing the assembly with the fasteners provided. Use gasketing material to prevent infiltration at the joints.

Optional sections such as mixing boxes are shipped separately. A list of these, along with any other unit components that have been shipped separately from the unit, is included at the end of this manual.

GENERAL INSTALLATION NOTES:

This unit must be installed in accordance with the current standard CAN/CSA/1-B149.1 or CAN/CSA/1-B149.2. Installation codes for gas burning appliances and equipment, and/or the applicable provincial regulations for the class, which should be carefully followed in all cases. Authorities having jurisdiction should be consulted before installations are made.

USA Units: Installation must be made in accordance with local codes, or in absence of local codes, with ANSI Standard Z223.1-1992 (N.F.P.A. No 54) "National Fuel Gas Code", or the latest edition of. All ANSI and NFPA Standards referred to in these installation instructions are the ones that were applicable at the time the design of this appliance was certified. The ANSI Standards are available from the American Gas Association, 1515 Wilson Boulevard, Arlington, Virginia 22209. The NFPA Standards are available from the National Fire Protection Association, Batterymarch Park, Quincy, Massachusetts 02269. The heaters are designed for use in airplane hangers when installed in accordance with ANSI/NFPA No. 409 and in public garages when installed in accordance with the NFPA No. 88A and NFPA No. 88B.

CLEARANCES

MODEL	CONFIGURATION	CLEARANCES TO COMBUSTIBLE CONSTRUCTION (in inches)					
		TOP	FRONT	FLUE	BACK	SIDES	FLOOR
C	Horizontal Suspended	6	36	18	36	6	*
D	Vertical Upflow Floorset	6	36	18	36	6	C
R	Vertical Downflow Floorset	0	36	18	36	6	NC**
M	Horizontal Floorset	6	36	18	36	6	NC**
AC	Vertical Upflow High Velocity Floorset	6	36	18	36	6	C

Notes: *Three inch bottom clearance.

** May be installed on combustible floor when mounted on 4-inch steel base channels. Floor clearance is measured from bottom of unit casing.

For service, it is advisable to maintain a minimum 24-inch clearance on the side opposite the controls and 42-inch clearance on the control side. If this unit is to be operated within a confined space or within a building of unusually tight construction, air for combustion and ventilation must be obtained from outdoors or other spaces freely communicating with the outdoors. At least one square inch of free area per 1000 Btuh of total input rating of all appliances within the space provided up to 400,000 Btuh. Refer to CAN/CSA/1-B149.1 natural gas, or CAN/CSA/1-B149.2 and B139, propane gas and B139 for air supply requirements of appliances heating input exceeding 400,000 Btuh. For USA units refer to ASSI Z223.1 section 1.3.4.2 and 1.3.4.3 for combustion air requirements.

Ducts connected to the furnace shall have removable access panels on both the upstream and downstream sides of the furnace. These openings shall be accessible when the furnace is installed and shall be sized to allow the observation of smoke or reflected light inside the casing to indicate the presence of leaks in the heat exchanger. The covers for the openings shall be attached in such a manner as to prevent leaks.

The furnace must not be operated in the presence of chlorinated vapors. When such vapors mix with the products of combustion, highly corrosive compounds result which will cause the premature failure of the heat exchanger and other components, voiding the warranty.

CONNECTING THE FLUE

In making flue connections to the unit, observe the following general recommendations. In addition, these connections must conform to the requirements of current CAN/CSA/B149.1 natural gas and CAN/CSA/ B149.2 and be in accordance with provincial and local authorities who have jurisdiction. For USA units, all venting installations shall be in accordance with the latest edition of Part 7, "Venting of Equipment", of the National Fuel Gas Code, ANSI Z223.1-1992 (or the latest edition), or applicable provisions of local building codes.

*See Fig. II and Fig. III for C vent system.

*Some jurisdiction may require a positive pressure vent system.

*The flue must be securely attached to the unit with tight joints.

*The pipe from the unit to the flue should rise at least $\frac{1}{4}$ inch per foot.

*The flue must not be sized to have a cross-sectional area less than that of the flue collar at the unit. See Fig. II and Fig. III.

*Other appliances must not be connected so as to vent through the flue of this unit.

*Do not use 90-degree tees or elbows greater than 45 degrees.

*Do not support the weight of the stack on the flue connection of the heating section.

*Minimize connecting pipe length and the number of bends by locating the unit as close to the flue pipe as possible.

*Maintain clearances between the flue pipe and combustible materials that are acceptable to the federal, provincial and local authorities having jurisdiction.

*Unit must be connected to a flue having sufficient draft to ensure proper operation of the unit.

- 1) **FOR POWER VENTED UNITS:** The flue draft should be adjusted at the damper of the induced draft fan when the unit is operating on high fire. The overfire draft measured with a manometer at the test port in the relief door should be minus 0.01 to minus 0.50 in W.C. as specified on the rating plate of the unit.
- 2) **FOR GRAVITY VENTED UNITS:** The flue draft should be adjusted at the damper of the burner fan when the unit is operating at high fire. The overfire draft measured with a manometer at the test port in the relief door should be positive 0.01 to positive 1.0 in W.C. as specified on the rating plate.

ELECTRICAL CONNECTIONS

NOTE: This unit has been examined and tested for compliance with CSA C22.2 No. 0 and CSA C22.2 No. 3.

All electrical work must conform to the requirements of the current CSA standard C22.1 Canadian Electric Code Part 1 and local ordinances.

Control voltage is as indicated on the rating plate.

Follow the wiring diagram supplied with the unit. This type of unit is available with a variety of fuel control schemes. Please ensure that you are using the correct wiring diagram for installation or trouble shooting.

If a space thermostat is used with the furnace, locate the thermostat so that cold drafts and hot discharge air streams do not affect its performance. Do not mount the thermostat on the casing on the unit, as it will be affected by radiated and conducted heat. Refer to the instructions furnished with the thermostat for further details.

If any of the original wire as supplied with the unit must be replaced, it must be replaced with type TEW 105 degrees or its equivalent except where noted.

Temperature controllers, limit controllers, remote selector switches, door switches or any other auxiliary electrical items must be connected to the terminals provided and shown on the wiring diagram.

For units shipped in two sections, electrical connections between sections are to be made by installer in the field.

Field wiring to be done by the installer is denoted by dotted lines on the wiring diagram. Solid lines on the wiring diagram indicate factory wiring by the manufacturer.

NOTE: Because bolts and set screws may become loose during unit shipment, such fasteners should be tightened upon installation.

WARNING: Fire or explosion hazard can cause property damage, severe injury, or death. Check for gas leaks with rich soap and water solution any time work is done on a gas line. Never use an open flame to detect gas leaks.

GAS PIPING

All gas piping should be in accordance with CAN/CSA/1-B149 and the regulations of local authorities having jurisdiction. Emergency manual shut down valve should be provided upstream of piping to unit and should be labeled for quick identification. Color coding of gas piping is also recommended.

Carefully check the unit rating plate for fuel type and supply pressure.

*Locate the high pressure regulator, if required, at least five feet from the unit.

*Gas lines must not be located in such a way as to hinder access to the unit

*A tee shall be installed in the supply line at the same elevation as the gas inlet connection. The tee must be equipped with a nipple and pipe cap to serve as a condensate collector.

*Test for tightness of gas connections after installation.

GAS VENT

High gas pressure regulator (if required), low pressure regulator, pilot pressure regulator, gas pressure switch (if supplied), and normally open vent valve (if supplied) must be vented outside of building for an indoor unit. (Check with authorities having jurisdiction).

GENERAL OPERATING INSTRUCTIONS

WARNING: Fire or explosion hazard can cause property damage, severe injury, or death. Check for gas leaks with rich soap and water solution any time work is done on a gas line. Never use an open flame to detect gas leaks.

GAS-FIRED UNITS

Refer to the rating plate for fuel input and supply pressures.

DO NOT ATTEMPT TO START THE BURNER IF THE UNIT IS FULL OF VAPOR OR GAS, OR IF THE COMBUSTION IS VERY HOT.

DO NOT USE THIS UNIT TO BURN GARBAGE OR PAPER.

DO NOT LEAVE COMBUSTIBLE MATERIALS NEAR THE UNIT.

SHUT OFF THE MANUAL FUEL SUPPLY VALVE IF THE BURNER IS SHUT DOWN FOR AN EXTENDED PERIOD OF TIME.

ENSURE CLEAN-OUT DOORS ARE IN PLACE BEFORE STARTING THE BURNER.

DO NOT START THE BURNER UNLESS THE BLOWER ACCESS DOORS ARE SECURELY IN PLACE.

START-UP PROCEDURES

WARNING: Fire or explosion hazard can cause property damage, severe injury, or death. Check for gas leaks with rich soap and water solution any time work is done on a gas line. Never use an open flame to detect gas leaks.

PRECAUTIONS

1. Ensure the main disconnect switch is in the “off” position.
2. Ensure the burner on-off switch is in the “off” position.
3. Check all electrical connections and tighten if necessary.
4. Check main fans (by rotating fan shaft by hand), bearing set screws, exhaustor wheel, and pulley set screws.

5. Lubricate (if necessary) the burner, induced draft fan and main fan motors. The specifications on the motors for grease and oil shall be adhered to.
6. Check heater outlets and exhauster, or induced draft discharge for obstructions.
7. Check fan-limit control. Setting should be as follows:

MODEL	CONFIGURATION	MAIN		AUXILIARY	
		LIMIT	FAN*	LIMIT	FAN*
C	Horizontal Suspended	240	120	NA	NA
D	Vertical Upflow Floorset	180	80	NA	NA
R	Vertical Downflow Floorset	180	80	165	100
M	Horizontal Floorset	240	120	NA	NA
AC	Vertical Upflow Floorset	180	80	NA	NA

*Fan "ON" settings, set differential for Fan "OFF" 15-20 degrees below fan setting.

8. Ensure that the flue is in place and providing proper overfire draft as noted in previous section on "Connecting the Flue".
9. The induced draft proving switch (power vented units only) is factory set and must not be tampered with. This switch will not allow unit operation if overfire draft is outside of the acceptable operating range.
10. Check all fuse blocks to determine that all fusing is installed.
11. Set the operating controls (eg. thermostat, remote panel switches) so as to allow heating operation of the unit.
12. Reset the primary flame safeguard by pushing the reset button or lever.
13. Reset motor starter by pushing the reset button, if so equipped.
14. Check building system gas supply and be sure all lines are purged of air.
15. Check building system gas supply pressure.
CAUTION - GAS UNITS
At maximum input the gas pressure must fall within the range specified on the unit rating plate.
Optional high and low gas pressure switches (if supplied) must be reset.
16. Check all piping for tightness and correct any signs of leaks.

WARNING: Fire or explosion hazard can cause property damage, severe injury, or death. Check for gas leaks with rich soap and water solution any time work is done on a gas line. Never use an open flame to detect gas leaks.

START-UP

1. Refer to factory test report for correct settings that are to be checked on the unit.
2. Check the supply fan motor thermal overload setting against the rating plate figure.
3. Ensure burner on-off switch is "off". (On heating units using a fan plenum switch, jumper the fan switch).
4. Put the main disconnect switch in the "on" position, thus activating the supply fan. Check for correct direction of rotation.

5. Check supply fan motor load against rating plate figure. If actual figure is significantly different than the rating plate value, take corrective actions with respect to duct work and accessories external to the unit
6. The thermal overloads must be left set appropriate to the motor performance after all adjustments have been made.
7. Repeat steps 2 through 6 for the induced draft fan motor (power vented units only).
8. Remove jumper from fan switch if installed in step 4 above.
9. Ensure all manual fuel valves are open.
10. Turn on-off switch on burner to “on” position.
11. Check direction of rotation of burner fan.
12. Set thermostat to temperature desired.
13. After a prepurge period the pilot will light and main burner will energize. Check for good clean flame and smooth light-off conditions.
14. Check unit performance as described on the factory test report. (Include items such as stack temperature, CO-2 level, flame signals, etc.). Readings obtained in the field should not deviate significantly from those obtained at the factory.

SHUT DOWN

EMERGENCY SHUT DOWN

1. Set disconnect switch to “off” position.
2. Close the manual main fuel valve.
3. Set the burner on-off switch to “off” position.

SERVICE SHUT DOWN

1. Set the burner toggle switch to “off” position.
2. Close the manual main fuel valve.
3. Set the operating controls (eg. thermostat, remote panel switches) so as to prevent heating operation.

TROUBLE SHOOTING GUIDE

WARNING: Fire or explosion hazard can cause property damage, severe injury, or death. Check for gas leaks with rich soap and water solution any time work is done on a gas line. Never use an open flame to detect gas leaks.

The equipment has been electrically and fire tested prior to shipment. However, during transit, misadjustment of controls and loose wires could develop. Do not assume a control is defective until it and its associated wiring is checked.

This equipment has many items supplied to us by outside vendors. This manual is accompanied by information sheets on most of these items which should be referred to for detailed service information.

The following is an obvious list of items that could cause field problems; however, it does not cover all problems encountered and is meant to be used as a guide only.

1. EXHAUSTER* AND/OR BURNER MOTORS FAIL TO RUN. CONTROL RELAY DOES NOT FUNCTION.
 - A) Blown fuses. Main disconnect open.
 - B) Control relay off on flame failure. Push reset button on control.
 - C) Thermostat or duct stat not calling for start-up. Defective control.
 - D) Loose wire or low voltage.
 - E) Motor overcurrent protector tripped in open position or defective.
 - F) Controls in limit circuit defective or tripped in open position.
 - G) Control transformer defective.
2. EXHAUSTER* AND/OR BURNER MOTORS RUN, NO IGNITION OR MAIN FLAME. PRIMARY RELAY WILL NOT INDICATE FLAME FAILURE.
 - A) Exhauster* and/or burner motors running backwards.
 - B) Misadjusted draft.
 - C) Misadjusted or defective exhauster draft switch*.
 - D) Main safety gas valve proof of closure switch and/or low fire proving switch (on modulating burners only) not made.
 - E) High or low gas pressure switch tripped.
3. EXHAUSTER* AND/OR BURNER MOTORS RUN, NO IGNITION OR MAIN FLAME. PRIMARY RELAY LOCKS OUT ON FLAME FAILURE.
 - A) Fuel valve manually closed.
 - B) Ignition transformer or pilot defective. Defective or improperly gapped ignition electrodes. Cracked porcelain.
 - C) Broken or loose wire in fuel circuit.
 - D) Gas nozzles obstructed or plugged.
 - E) Gas pilot valve defective. Main fuel valve defective.
 - F) Insufficient fuel at supply. Air in system.
4. BURNER SHORT CYCLES.
 - A) High limit switch misadjusted or defective.
 - B) Draft switch* misadjusted or defective.
 - C) Various ductstats defective or settings improper.
5. EXHAUSTER* AND/OR BURNER MOTORS RUN, IGNITION AND MAIN FLAME. MAIN FAN MOTOR FAILS TO OPERATE.
 - A) Automatic fan switch not set properly or defective.
 - B) Blown fan fuses.
 - C) Motor overcurrent protector tripped open or defective.

6. UNABLE TO ADJUST FIRE TO BURN CLEANLY.

- A) Insufficient exhauster* draft.
- B) Insufficient or too much fuel at supply.
- C) Incorrect adjustment of air shutters at burner.
- D) Insufficient combustion air available.
- E) Burner blower wheel running backwards.

7. INSUFFICIENT HEAT BEING DISCHARGED INTO AREA.

- A) Main fan blowers running backwards.
- B) High limit switch setting too low or defective.
- C) Burner locked in low fire position.
- D) Ductstat setting improper or defective.
- E) Field mounted thermostat and/or ductstats improperly wired.

*APPLIES TO POWER VENTED UNIT ONLY.

MAINTENANCE

Regular maintenance is necessary to ensure the efficient operation and long life of this unit. This maintenance should be performed by, or supervised by, qualified service personnel. A maintenance schedule should be prepared for the unit based on its application and location.

RECOMMENDED MONTHLY MAINTENANCE

- 1. Check for loose connections in the wiring.
- 2. Check the voltage at the unit while it is in operation.
- 3. Check motor amperage draws against rating plate values.
- 4. Inspect all contactors to ensure that they are clean and making good contact.
- 5. Check all fittings, valves and lines for leaks.
- 6. Check the burner; clean and adjust if necessary.
- 7. Check the flame sensor; clean if necessary.
- 8. Check the fuel supply pressure to the unit.
- 9. On gas fired units, check the manifold pressure.
- 10. Clean or replace air filters if necessary. Replace filters only with type equivalent to those supplied with the unit by the factory.
- 11. Check all damper, linkages and damper actuators; adjust and tighten as required.
- 12. Check all belts; adjust or replace as necessary.
- 13. Check operation of all safety controls.

RECOMMENDED YEARLY MAINTENANCE

- 1. Perform the monthly maintenance recommended.
- 2. Inspect blower wheels and housing; clean if necessary.
- 3. Inspect all set screws on blower wheels and pulleys to ensure that they are secured to their respective shafts.
- 4. Check ignition spark and adjust gap if necessary.
- 5. Inspect and clean ignition electrodes.
- 6. Check flame supervisor relay.
- 7. Inspect all operating and safety controls; clean and replace if necessary.
- 8. Inspect the header box and secondary tubes through the access panels provided. Check for carbon deposits, soot, scale, or rust; clean as required. Check condition of flue pipe.
- 9. Clean the primary combustion chamber.
- 10. Clean the burner.

NOTE: Refer to manufacturer literature provided for maintenance requirements of optional equipment.

BEARING INSTALLATION AND MAINTENANCE

NOTE: To prevent premature failure – please ensure greasing instructions below are applied. As well, tighten bearing set screws, collars, and wheel lugs every four to six months.

ENGINEERING – BALL & ROLLER BEARINGS LUBRICATION

For bearings that are equipped with a hydraulic grease fitting threaded into the housing for ease of lubrication, the proper amount of lubricant in the bearing is important. Both excessive and inadequate lubrication may cause failure. The bearings should be re-lubricated while they are rotating (if it is safe to do so); the grease should be pumped in slowly until a slight bead forms around the seals. The bead in addition to acting as an indicator of adequate re-lubrication provides additional protection against the entry of foreign matter and helps flush out contaminants in the bearing.

By the time the slight bead is formed, it will be noticed that the bearing temperature will rise. It is not uncommon for the temperature to rise as much as 30 degrees Fahrenheit after re-lubrication. If necessary to re-lubricate while the bearing is idle, refer to the recommended re-lubrication grease chart tables on the following page for various sizes of the bearings.

Lubricant-Standard Bearings:

All bearing units are pre-lubricated at the factory with a lithium soap grease which is compatible with multi-purpose grease readily available from local suppliers. The lubricant selected for factory lubrication uses a highly refined mineral oil with a high viscosity index, thickened with lithium soap to conform to NLGI grade 2 consistency. A suitable additive package is added to protect the highly polished rolling contact surfaces from corrosion and oxidation of the lubricant. The lubricant is satisfactory for an operating temperature range of –30 F to +250 F.

Select standard industrial grade greases that conform to the following specification for optimum bearing performance:

General Duty Ball & Roller;
58-75 SUS @ 210 F
450-750 SUS @ 100 F

Premium Duty Ball & Roller;
68-75 SUS @ 210 F
600-750 SUS @ 100 F

Heavy Duty Roller Bearing;
82 SUS @ 210 F
886 SUS @ 100 F

NOTE: For heavy loaded roller bearing applications, grease with EP additives are often recommended for optimum performance.

Table 1. Recommended Lubrication

Ball Bearings		Roller Bearings	
Shaft Size (inches)	Grease Charge (ounces)	Shaft Size (inches)	Grease Charge (ounces)
1/4 to 3/16	0.03	1-3/16 to 1-1/4	0.1
1/2 to 3/4	0.1	1-3/8 to 1-7/16	0.22
1-1/4 to 1-1/2	0.15	1-1/2 to 1-11/16	0.32
1-11/16 to 1-15/16	0.2	1-3/4 to 2	0.5
2 to 2-7/16	0.3	2 to 2-3/16	0.55
2-1/2 to 2-15/16	0.5	2-1/4 to 2-1/2	0.65
3 to 3-7/16	0.85	2-11/16 to 3	0.85
3-1/2 to 4	1.5	3-3/16 to 3-1/2	1.25
-	-	3-15/16 to 4	2.5
-	-	4-7/16 to 4-1/2	3.1

Frequency of re-lubrication depends upon operating conditions. The bearing operating temperature is the best index for determining a re-lubrication schedule. The following chart gives the frequency of re-lubrication based upon continuous operation for various operating temperatures and can be used as a satisfactory guide for determining when bearings should be re-lubricated.

Table 2. Lubrication Frequency

Speed	Temperature	Cleanliness	Greasing Interval
100 RPM	Up to 120 F	Clean	5 months
500 RPM	Up to 130 F	Clean	2 months
1000 RPM	Up to 210 F	Clean	2 weeks
1500 RPM	Over 150 F	Clean	Weekly
Any speed	Up to 150 F	Dirty	1 week to 1 month
Any speed	Over 150 F	Dirty	Daily to 1 week
Any speed	Any temperature	Very dirty	Daily to 1 week
Any speed	Any temperature	Extreme conditions	Daily to 1 week

TENSIONING V-BELT DRIVES

1. Ideal tension is the lowest tension at which the belt will not slip under peak load conditions.
2. Check tension frequently during the first 24-48 hours of operation.
3. Over-tensioning shortens the belt and bearing life.
4. Keep belts free from foreign material that may cause slip.
5. Make V-drive inspection on a periodic basis. Tension when slipping. Never apply belt dressing as this will damage the belt and cause early failure.

Check and tighten belt tension. The following procedure is recommended for tightening belts:

- a) Measure span "X" shown in Figure A.
- b) At the center of span length "X", apply a force perpendicular to the span and large enough to deflect belt 1/64" for each inch of span length. Example- the required deflection for a 40" span would be 40/64" or 5/8".
- c) Compare the force applied with the values given in Table III. If force is between the minimum and maximum range shown, the drive tension should be satisfactory. A force below the minimum value indicates an under tightened belt and force that exceeds the maximum value indicates an over tightened belt.

FIGURE A

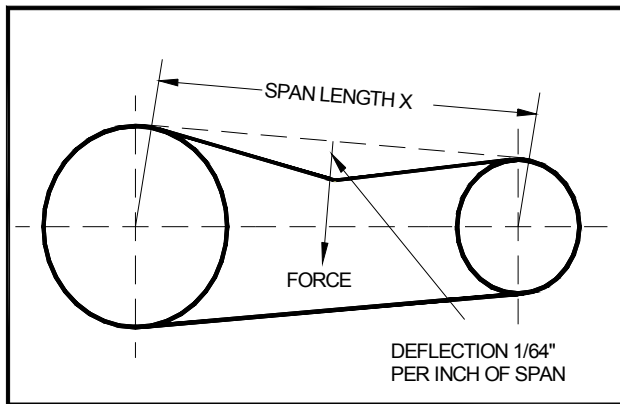


TABLE III

BELT CROSS SECTION (Marked on Belt)	MOTOR PULLEY PITCH DIAMETER	DEFLECTION FORCE	
		MINIMUM	MAXIMUM
A	3.0" - 3.6"	2.62lbs.	3.25lbs.
	3.8" - 4.8"	3.0lbs.	4.0lbs.
	5.0" - 7.0'	3.25lbs.	5.0lbs.
B	3.4" - 4.2"	3.0lbs.	5.0lbs.
	4.4" - 5.6'	4.0lbs.	5.87lbs.
	5.8" - 8.6"	5.25lbs.	7.87lbs.

GIDM INDUSTRIAL HEATER - WARRANTY

I.C.E. MFG. LTD. WARRANTS THAT IT WILL SUPPLY TO OR REPAIR FOR THE PURCHASER OF THIS PACKAGE UNIT HEATER THE HEAT EXCHANGER FREE OF CHARGE F.O.B. FACTORY IF SAID HEAT EXCHANGER WEARS OUT OR FAILS UNDER NORMAL USE AND SERVICE DUE TO A DEFECT IN MATERIAL AND/OR WORKMANSHIP DURING FIVE (5) YEARS FROM DATE OF SHIPMENT FROM THE FACTORY PROVIDED AN ALL STAINLESS HEAT EXCHANGER IS PROVIDED. COMBINATION STAINLESS STEEL WITH MILD STEEL SECONDARY HEAT EXCHANGERS ARE WARRANTED FOR ONE (1) YEAR.

ALL MECHANICAL COMPONENTS, MOTORS, BLOWERS, VALVES, AND CONTROLS ARE COVERED BY A ONE (1)YEAR LIMITED WARRANTY.

THIS WARRANTY DOES NOT INCLUDE ANY FREIGHT, LABOUR, OR SALES TAXES THAT MAY BE INCURRED BY THE PURCHASERS AND IS SUBJECT TO THE FOLLOWING CONDITIONS.

- 1) THE UNIT SHALL BE INSTALLED BY A QUALIFIED HEATING CONTRACTOR IN ACCORDANCE WITH PROVISIONS OF THE SERVICE MANUAL.
- 2) THE UNIT SHALL HAVE BEEN INSTALLED IN ACCORDANCE WITH ALL PROVINCIAL AND LOCAL CODES.
- 3) THE UNIT SHALL HAVE BEEN SUBJECT TO ONLY NORMAL USE IN SERVICE AND SHALL NOT HAVE BEEN MISUSED, NEGLECTED, ALTERED OR OTHERWISE DAMAGED.
- 4) THE UNIT SHALL HAVE BEEN OPERATED WITHIN ITS PUBLISHED CAPACITY AND WITH THE PRESCRIBED FUEL.
- 5) ALL AUTOMATIC CONTROLS SHALL HAVE BEEN OPERATIVE AT ALL TIMES.
- 6) THE UNIT HAS NOT BEEN ALLOWED TO EXCEED IT'S PROPER TEMPERATURE LIMITS DUE TO CONTROL MALFUNCTION OR INADEQUATE AIR CIRCULATION.
- 7) THERE IS NO EVIDENCE OF TAMPERING OR DELIBERATE DESTRUCTION.
- 8) THE UNIT HEATER HAS NOT BEEN SUBJECT TO AIR FOR COMBUSTION CONTAMINATED WITH FLUORIDES, DRY CLEANING FLUID VAPORS HAIRDRESSING FLUID VAPORS, (OR ANY VAPORS FOUND TO HAVE ADVERSE EFFECT ON METALS).

NO REPRESENTATIVE OF ICE MFG. LTD., NOR ANY OF ITS DISTRIBUTORS OR DEALERS, IS AUTHORIZED TO ASSUME FOR ICE MFG. LTD. ANY OTHER OBLIGATIONS OR LIABILITY IN CONNECTION WITH THIS PRODUCT, NOR ALTER THE TERMS OF THIS WARRANTY IN ANY WAY. THIS WARRANTY IS LIMITED TO THE EXPRESS PROVISIONS CONTAINED HEREIN AND DOES NOT EXTEND TO LIABILITY FOR LABOUR COSTS INCURRED IN REPLACING DEFECTIVE PARTS.

AUTHORIZATION TO RETURN ANY ALLEGED DEFECTIVE PARTS MUST BE OBTAINED FROM THE FACTORY BEFORE THE PART IS TRANSPORTED AND THE TRANSPORTATION CHARGES FOR ANY ALLEGED DEFECTIVE PARTS SHALL BE PREPAID BY THE OWNER. ICE MFG. LTD. WILL NOT ACCEPT CHARGES FOR PARTS PURCHASED UNLESS THE CONDITIONS OF THIS WARRANTY HAVE BEEN SATISFIED.

THE EXPRESS WARRANTIES HEREIN CONTAINED ARE IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY AND OF FITNESS FOR ANY PARTICULAR PURPOSE. ICE MFG. LTD. SHALL NOT BE LIABLE FOR DAMAGES, INCLUDING SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF,OR IN CONNECTION WITH THE PERFORMANCE OF THE GIDM SERIES UNIT HEATER OR IT'S USE BY THE OWNER. ICE MFG. LTD. LIABILITY IS LIMITED EXCLUSIVELY TO REPAIR AND OR REPLACEMENT OF THE DEFECTIVE PART. PARTS CAN BE OBTAINED FROM ICE MFG. LTD. WINNIPEG, MANITOBA ON THE BASIS THAT CREDIT WILL BE ISSUED IF DEFECTIVE PARTS RETURNED QUALIFY FOR REPLACEMENT PURSUANT TO THE TERMS AND CONDITIONS OF THIS WARRANTY.

ECONOMITE 400-33 & F400-33 GAS BURNERS

INITIAL START UP AND ADJUSTMENT

CAUTION: Only qualified service personnel should attempt initial start-up.

1. Study these instructions, the wiring diagrams and flame safeguard instructions. Locate and identify all of the burner components.
2. Have on hand: CO and CO₂ tester, stack thermometer, 0" to 30" W.C. gas pressure gauge, U-Tube manometer and DC volt meter.
3. Make the proper setting on all limit controls and set the operating control to call for heat.
4. Check the piping for leaks. A quick way to do this is to turn off main shut-off valve "A" and pilot valve "B", then turn on the gas pressure to the gas supply line and observe the meter test dial. There should be no movement of the dial hand for at least five minutes on a half foot dial (proportionally longer on larger dials). All other gas appliances must, of course, be completely shut off during this test. If a leak is detected it should be located with a soap suds test and corrected. If air or inert gas (do not use oxygen) under pressure is used for leak detection, do not subject the main and pilot valves or regulators to pressure readings exceeding ½ PSI (disconnect piping to prevent damage during high pressure leak testing).
5. Purge the gas supply line up to the main and pilot manual valves. Do **not** purge into the combustion chamber.
6. Make sure that the main and pilot manual gas valves are closed and that the burner line switch is off.
7. The pilot gas pressure regulator is set for 3 ½" W.C. outlet pressure which is suitable for natural gas and average draft conditions. If propane gas is to be used, adjust the regulator to its minimum outlet pressure setting.
8. Firmly push in the flame safeguard manual reset button "C" and the **Model F400** motor manual overload reset.
9. Check that the blower motor rotates freely.
10. Turn line switch on momentarily and check for proper blower wheel rotation.
11. Open pilot manual valve "B".
12. Trial for pilot ignition. Turn switch to winter operation. If power vented, burner will be powered when air switch contacts close. Flame safeguard is powered, motor relay 3K pulls in. As motor reaches operating speed, the blower interlock switch "makes" to initiate a 30 second prepurge period. After prepurge, the load relay 1K pulls in to energize the pilot solenoid and ignition transformer and the pilot should light.
13. If the pilot fails to light during the 15 second trial, it is probably due to air in the pilot line. Wait one minute and push flame safeguard reset button to restart, (400 motor will continue to run during the safety lockout. F400 motor will stop approximately 15 seconds after solenoid valve closes).
14. Observe the pilot flame. If it is weak, screw in the pilot regulator adjustment. If it is excessively rich and large or floating from the pilot tip, back off the regulator adjustment. Set the pilot to a stable blue flame which burns firmly within the pilot tip. Check flame current with a DC volt meter. It should show a steady 15-17 volts (Fireye) or 3-5 VDC (Honeywell). Operate air shutter throughout range to check pilot stability. Adjust pilot regulator slowly to obtain highest reading possible, try several relights.
15. Set the shutter to match the intended input, i.e. full open for maximum, closed for minimum or partially open for mid-range.
16. Slowly open main manual valve until the main flame ignites. Continue to open valve, adjusting air shutter if necessary, if the manual valve is fully opened before input is reached, screw in regulator adjustment. Set regulator to desired manifold pressure, marked on the rating plate.
NOTE: Do not screw the adjusting nut in past the point where no further increase in manifold pressure is noted. If the specified pressure cannot be reached, check for proper inlet pressure at the inlet of the main manual valve with the burner running.
17. Readjust the main air shutter to provide a quiet soft flame-blue at the burner nozzle with well defined orange tips for natural gas or with well defined yellow tips for propane.
18. The primary air adjustment which affects the flame length, has been set wide open for average conditions. Decrease the primary air if a longer, softer flame is desired.
19. Cycle the burner on and off several times to check its operation.
20. Check the operation of the limit and operating controls.
21. Check the flue gas temperature ahead of the diverter. It should be above 300°F. Excessive flue temperatures will result in low efficiencies. Low flue temperatures may cause excessive condensation. Reset gas input if necessary to adjust stack temperature, (on/off operation only).

22. Make the final setting of the air shutter by checking the flue gases with an “Orsat” or other similar combustion testing instrument. There should be no carbon monoxide and the carbon dioxide content should be within limits prescribed by the local gas company. Make sure that the main air shutter is locked securely in place.
23. Recheck pilot to make sure that its operation has not deteriorated because of main shutter adjustment. If necessary, readjust pressure regulator.
24. Modulation operation: see wiring diagram and modulating instruction sheets supplied with this unit for correct set up.
25. If linkage between Butterfly valve and Burner (gravity unit only) and venter fan if power vented needs to be adjusted from factory setting, (see below).

GIDM LINKAGE SET-UP WITH POWER VENTS

1. Install a manometer on suction at test port in pop-up door.
 - a) Ensure there is a negative pressure at that point on low fire through to high fire.
- .50 to - 75” W.C. low fire and -.01 to -.10 on high fire.
2. To increase exhaust move drive rod toward damper pin (decrease the distance between drive rod and center pin).
3. To increase combustion air move drive rod towards center pin (decrease the distance between drive rod and center pin).
4. To ensure a negative pressure throughout full modulation range, you may have to speed up exhaust and or burner damper to match gas flow to the burner.
Move drive rod closer to the drive pin on the butterfly valve, (this will reduce the movement of the burner damper).
5. Adjust low and high fire on the stop screws on the butterfly valve.

NOTE: The motor is allowed to over run with the spring linkage set the travel on the Penn Johnson motor to ensure it does not go to far or damage to the motor could occur.

MINIMUM EQUIPMENT TO START-UP AND SET-UP GIDM GAS BURNER

1. CO and CO₂ tester.
2. Stack thermometer.
3. 0” to 10” W.C. gas pressure gauge or magnehelic 0” to 10” W.C.
4. U-tube manometer or -5” to +5” magnehelic gauge.
5. DC volt meter.

ECONOMITE 400-33 & F400-33 GAS BURNERS

PART #	DESCRIPTION	PART #	DESCRIPTION
3981-001	4" Diameter Stainless Sleeve	5253-01	Pilot assembly with insulators, rods, temflex and baffle.
4904-45	Quadrant-Air Shutter Adjustment	5253-10	PVC tubing—7/16" I.D. x 2" long
4905-15	Air shutter-Internal	5234-40	Flame rod Gland Nut
4917-00	Main Orifice Holder	5234-50	Flame rod assembly.
4918-11	Orifice Elbow (1" NPT)	5249-01	Pilot air baffle.
4919-60	Blower Wheel with centrifugal actuator and Disc	5249-32	Spark rod assembly.
4919-90	Centrifugal Actuator Disc	5250-00	Pilot tip with cone less insulators, rods, temflex and baffle.
4927-509	1/6 HP motor 120/1/60 [G.E. 5KH35FN123X (note 1/3 HP substitute), 5KH33DG655Y, 5KH33DN171Y; Dayton 6K149; Marathon 48S34D191A, 48S34D203; Universal Electric HH1E001N; Century X-173668-XX]	5272-00	Blower inlet grille.
		5939-01	Flame rod wire--5" through 9" burner tube.
		8433-06	Pilot spud (.021)—PROPANE (3N4-021, Y90AA-5232).
4922-90	Primary Air Shutter Kit	8433-10	Pilot spud (.032)—NATURAL (2-15M1-032, Y90AA-5232).
4924-10	Inlet Side Plate		
4944-02	Main Spud 25/64" (.390) minimum capacity--NATURAL—drill 7/16" (.437) for 400/540 MBH range and omit for 540/700 range	8437-419	1/6HP totally enclosed motor 115/1/60 (Century X-176797-XX) special and Canadian burners only. Not interchangeable with drip proof motor 4921-50.
4944-03	Main Spud #21 Drill(.390) minimum capacity--PROPANE—drill for desired capacity per manual	8447-11	Ignition transformer 120/1/60 primary, 6000 volts secondary (Webster 612-6A020, 612-6A044; France 3RABVR-19; Jefferson #638-181).
4944-10	Main Spud Extension		
4946-00	Motor Spacer (4 required)	8450-21	Orifice holder sealing gasket.
4959-05	External Pilot Air Tube Kit	8451-06	Spark rod insulator sleeve.
5201-00	½" sq. pass thru for 1/4" tube fitting (gas line)	8484-72	Heyco strain relief (SR-4K-1)--Flame rod wire.
5201-10	½" sq. pass thru for 5/16" tube fitting (air line)	8484-75	Heyco strain relief (SR-11-2)--Spark rod wire.
5202-08	Pilot Spud #55 (.052) drill [was #54(.055)]--NATURAL AND PROPANE	8484-78	Heyco snap bushing (B-8875-750).
		8502-05	Spark cable--15" burner tube.
5211-51	Motor, wheel and side plate assembly 120/1/60	8502-06	Spark cable--5" through 9" burner tube.
5225-263	Blower housing and burner tube assembly--9"	8423-16	Blower interlock switch (MICRO BZ-2RQ174-A2).

WARNING: Explosion hazard. Can cause serious injury or death. This device can malfunction if it gets wet. Never try to use a device that has been wet - replace it.

DECODING CENTURY MOTOR NUMBERS. Single digit prefix denotes manufacturer's location. Double digit suffix denotes manufacturer's mechanical code.

GP TYPE C FORCED DRAFT BURNER C-6.2 TO C-12.9

INITIAL START UP

1. Make sure burner power switch is off and manual main and pilot valves are closed.
2. Make proper settings on limit controls.
3. Have on hand CO and CO₂ tester, stock thermometer, 0" to 30"W.C. gas pressure gauge, u- tube manometer and D.C. volt meter.
4. Turn on burner power switch momentarily to check blower rotation.
5. Check gas tightness of main and pilot safety shut off valves (if used) by connecting a pressure gauge to the pressure tap located between the safety shut-off valve and the test firing valve. When the test firing valves are closed and the manual shut-off valves are opened, no pressure rise should show on the pressure gauge.
6. The air damper has been factory set approximately during test firing if need to adjust see linkage set up sheet provided with unit. Turn on the burner switch, while the main and pilot gas firing valves are closed. After the prepurge the ignition transformer and solenoid valves will be energized. Observe the ignition spark for proper location and firmness. After the trial for ignition time, the ignition transformer and solenoid valve are deenergized and the burner will lock out.
7. Open the pilot test firing valve and turn on the burner switch, while the manual main shut-off valve stays closed. After the prepurge, the ignition transformer and the pilot solenoid valve are energized. Observe the pilot flame and if necessary, adjust the pilot pressure regulator to obtain a stable flame with the highest steady flame signal. For flame signal readings, see attached flame safeguard manual. With the main manual shut-off valve still closed, the flame safeguard will lock out after approximately 10 seconds, only with high/low and modulating burners which use an interrupted pilot. Repeat the ignition cycle a few times to ensure a fast ignition and stable pilot flame.
8. Open the main manual shut-off valve and set the high/low limit switch and the modulating controller so that after establishing a main flame, the burner will travel to high fire. Start the burner. In high fire, check the manifold pressure with the required pressure for the firing rate, (see suggested inspection list) and if necessary, adjust pressure regulator. Readjust the air damper if fire looks to lean or too rich.
9. Take a gas meter reading and readjust manifold gas pressure if necessary. Take a CO₂ or O₂ and a CO reading. CO₂ should be between 8-1/2 and 9-1/2 % and O₂ should not be more than 5%, both with a maximum CO reading of .04%. Readjust air damper accordingly.
10. With high/low and modulating burners, mark the high air damper position and set the high/low limit control or modulating control so that the burner travels to low position. Visually adjust the input adjuster on the main gas shut-off valve actuator if low fire is too rich or too lean. Take gas meter reading and readjust the input adjuster according to the required low fire input, but not less than indicated in the specifications table. In order to keep the high fire setting unchanged when adjusting the low fire air damper position, drive the burner to high fire, change the positioning of the linkage as indicated in "Low Fire Adjustment", drive the burner back to low fire and check the CO₂ or O₂ readings. Repeat this procedure until a satisfactory setting is obtained.
11. Make sure all linkage connections are tight and check the readings in high and low fire again.
- 11a. The motor is allowed to over run with the spring linkage. Set the travel on the Johnson motor to ensure it does not go too far, or damage to the motor could occur.
12. Reset controller and limits to their desired settings.

WARNING


DO NOT ADJUST FLAME VISIBLY. INSTRUMENTS ARE THE ONLY SAFE AND RELIABLE MEANS TO DETERMINE THE PROPER ADJUSTMENTS.

BURNER SAFETY CHECK

1. Start and stop burner several times to ensure proper operation.
2. Check operation of combustion safeguard control by simulating a flame failure, making certain the burner locks out on safety within the proper time.
3. Check operation of the air flow switch, making certain fuel valve closes when the air flow diaphragm switch opens.
4. Bypass discharge controller and check to ensure high limit will shut down burner on temperature increase. If changed reset as per factory setting.
5. Reset operating control to desired temperature. Permit burner to run until it is shut off by the operating control. Adjust operating control, if necessary, until it causes burner to stop and start within desired range.
6. With the burner running, check hi and low gas pressure switch if on manifold. The burner should shut off immediately.
7. Conduct minimum, pilot turn down test, reduce gas pressure to pilot with manual shut off cock to the point pilot flame is extinguished or fails to prove. Increase gas flow slightly. Main flame must be ignited with this pilot flame.
8. The following readings should be taken and record after final adjustments have been made.
 - a) Burner input (CFH gas).
 - b) Percent CO₂ or O₂.
 - c) CO indication.
 - d) Stack temperature.
 - e) Firebox pressure.
 - f) Fuel pressure (in W.C.-gas) (main and pilot).
 - g) Voltage to burner.
9. Give instruction to owner (operator).

WARNING: SHOULD OVERHEATING OCCUR


1. Shut off the manual gas control (s) to the burner.
2. Do not shut off the control switch to the pump or blower.

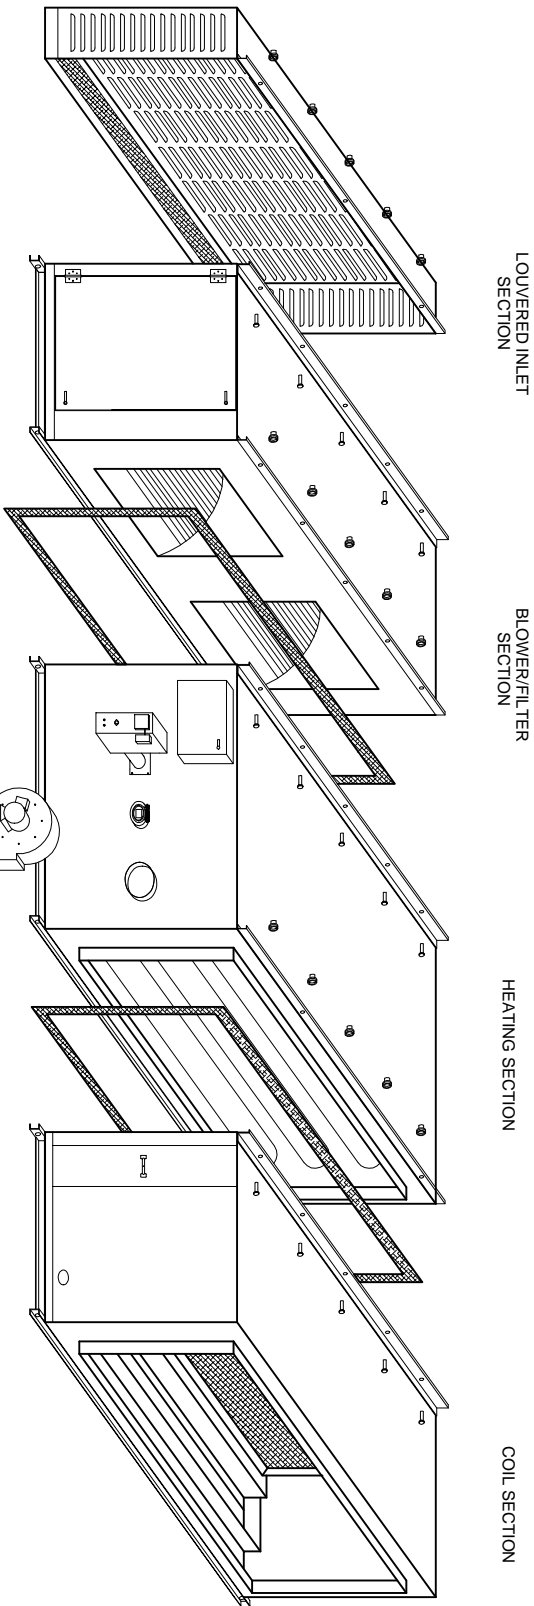

NOTE:
VENTING MAY BE EITHER POWER OR GRAVITY

NOTE:
SOME FIELD WIRING TO BE CONNECTED BETWEEN SECTIONS. BY CONTRACTORS ON UNITS SHIPPED IN SECTIONS TO JOB SITE.
UNIT MAY NOT BE EXACTLY AS SHOWN.

Rev	By	Revision Description	Date	<div><div>GIDM SERIES</div></div>				
				TITLE GIDM FIELD ASSEMBLY				
DRAWN BY JV		ISSUED BY		SCALE NTS		DRW. NO. FIG 1		
CHK. BY JS		DATE DEC. 18/98				JOB NO.		
						REV		

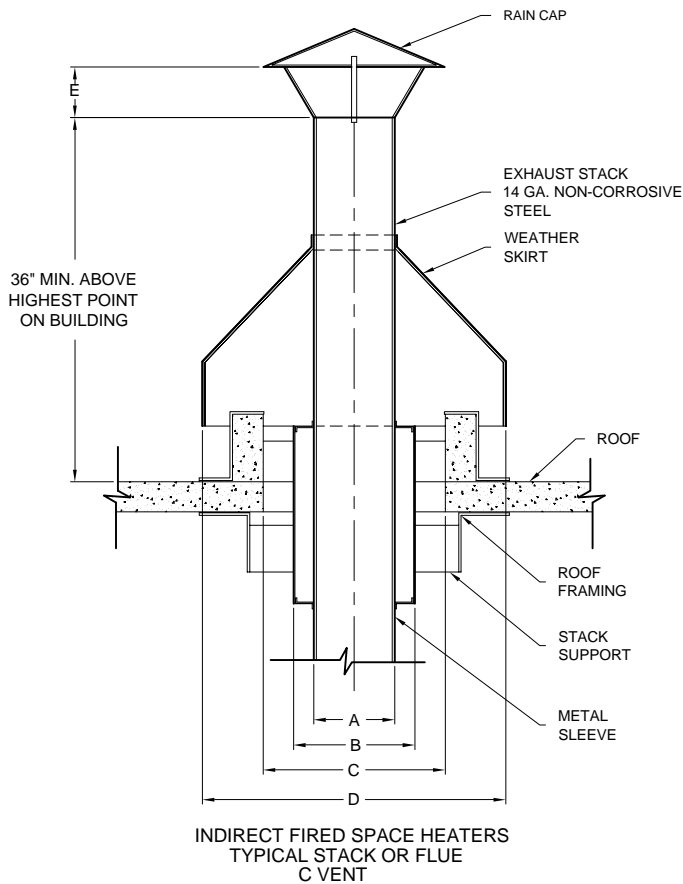


MODEL	STACK SIZE	A	B	C	D	E
25-75	8"Ø	8	12	18	30	5
85-100	10"Ø	10	14	20	32	5
125-175	12"Ø	12	16	22	34	6
200-250	14"Ø	14	20	24	36	8
275-400	16"Ø	16	24	28	38	10
500-600	18"Ø	18	26	32	42	12

NOTES:

1. REFER TO ENGINEERING RATING FOR MINIMUM RECOMMENDED STACK SIZES FOR POWER VENTERS (FIG. III).
2. DIMENSIONS B, C & D SUBJECT TO LOCAL CODE REQUIREMENTS. CONSULT LOCAL AUTHORITIES HAVING JURISDICTION BEFORE INSTALLATIONS ARE MADE.

FIG. II

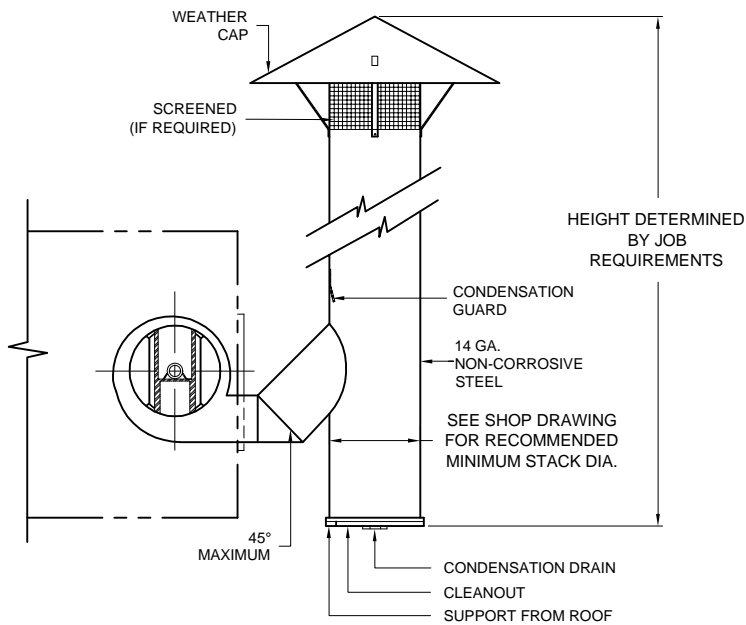

MODEL	STACK SIZE	MAX. L&H	
25-75	8"Ø	100"	0.11" P.D.
85-100	10"Ø	125"	0.10" P.D.
125-175	12"Ø	125"	0.10" P.D.
200-250	14"Ø	135"	0.10" P.D.
275-400	16"Ø	100"	0.11" P.D.
500-600	18"Ø	125"	0.11" P.D.


NOTE:

RECOMMENDATIONS ONLY, AUTHORITIES HAVING JURISDICTION SHOULD BE CONSULTED BEFORE INSTALLATION ARE MADE.

FIG. III

				TITLE					
				INDIRECT FIRED SPACE HEATERS					
Rev	By	Revision Description		Date					
ICE		GIDM SERIES		DRAWN BY	ISSUED BY	SCALE	DRW. NO.		
				JV		1:1	FIG. II & FIG. III		
CHK. BY	DATE					JOB NO.		REV	
	MAY 19/98							-	

BURNER
MOTOR

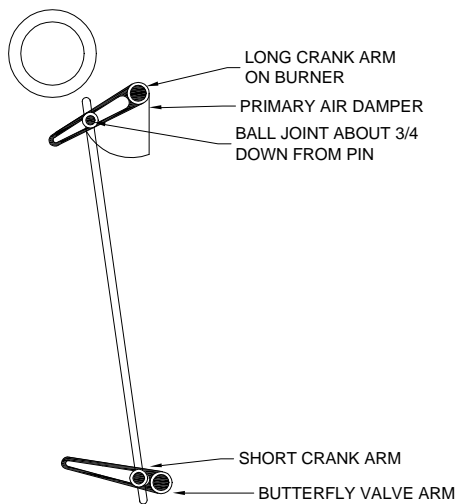

GIDM GRAVITY VENTED F-400-33 BURNER

1. THE ABOVE SETTING IS IN LOW FIRE POSITION.
2. THE PRIMARY AIR ON BURNER TO BE ONLY 1/2-1 TURN OPEN AT SET SCREW.
3. TO DECREASE PRIMARY AIR ON HIGH FIRE MOVE BUTTERFLY CRANK ARM DOWN CLOSER TO HORIZONTAL POSITION.


LINKAGE OPERATION (POWER VENT)

1. INSTALL A MANOMETER ON SUCTION AT TEST PORT IN POP-UP DOOR.
 - A) INSURE THERE IS A NEGATIVE PRESSURE AT THAT POINT ON LOW FIRE THROUGH TO HIGH FIRE. -.50 TO -.75 W.C. LOW FIRE AND -.01 TO -.10 ON HIGH FIRE.
2. TO INCREASE EXHAUST MOVE DRIVE ROD TOWARD DAMPER PIN (DECREASE THE DISTANCE BETWEEN DRIVE ROD AND CENTER PIN.)
3. TO INCREASE COMBUSTION AIR MOVE DRIVE ROD TOWARDS CENTER PIN (DECREASE THE DISTANCE BETWEEN DRIVE ROD AND CENTER PIN).
4. TO INSURE A NEGATIVE PRESSURE THROUGHOUT FULL MODULATION RANGE, YOU MAY HAVE TO SPEED UP EXHAUST AND OR BURNER DAMPER TO MATCH GAS FLOW TO THE BURNER.
MOVE DRIVE ROD CLOSER TO THE DRIVE PIN ON THE BUTTERFLY VALVE. (THIS WILL REDUCE THE MOVEMENT OF THE BURNER DAMPER)
5. ADJUST LOW AND HIGH FIRE ON THE STOP SCREWS ON THE BUTTERFLY VALVE.

NOTE:

THE MOTOR IS ALLOWED TO OVER RUN WITH THE SPRINGS LINKAGE SET THE TRAVEL ON THE PENN JOHNSON MOTOR TO INSURE IT DOES NOT GO TO FAR OR DAMAGE TO THE MOTOR COULD OCCUR.

BURNER
DAMPER

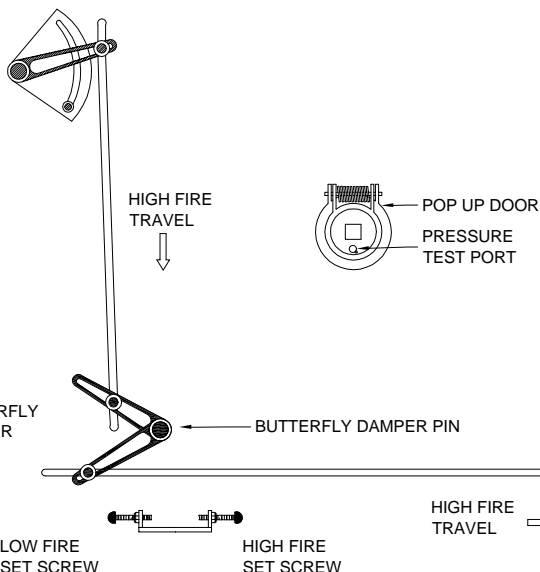

GIDM - LINKAGE SET-UP WITH POWER VENT

TITLE

GIDM GRAVITY VENTED LINKAGE OPERATION
AND POWER VENT LINKAGE SET-UP

Rev By Revision Description

Date

ICE

**GIDM
SERIES**

DRAWN BY
JV

ISSUED BY

SCALE
1:1

DRW. NO.
FIG. IV

CHK. BY

DATE
JULY 1/98

JOB NO.

REV
-

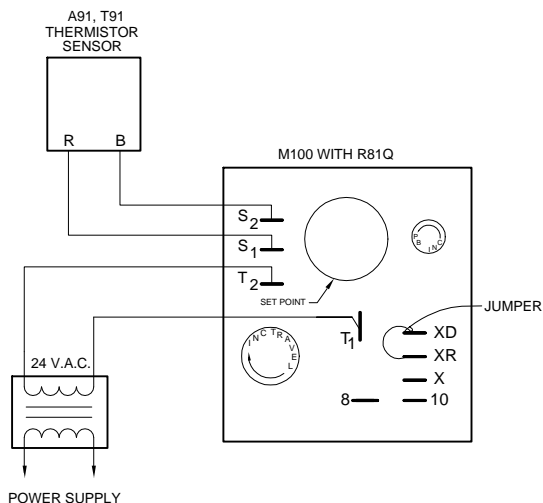


FIG. 4 - TYPICAL WIRING HOOKUP FOR THE R81QAA INSTALLED IN AN M100 SERIES MOTOR ACTUATOR.

PROPORTIONAL BAND

THE PROPORTIONAL BAND ADJUSTMENT, LOCATED ON THE TERMINAL BOARD, IS ADJUSTABLE BETWEEN 2 AND 30°F (1.1 TO 16.7°C). FIELD ADJUSTMENTS ARE MADE WITH THE SYSTEM IN OPERATION. TURN THE PROPORTIONAL BAND ADJUSTMENT UNTIL THE SYSTEM STABILIZES AND THE MOTOR ACTUATOR NO LONGER OSCILLATES.


ADJUSTMENT

SET POINT

THE SET POINT FOR THE REMOTE SENSOR IS LOCATED ON THE R81'S TERMINAL BOARD AND HAS A CALIBRATED DIAL THAT IS ADJUSTABLE BETWEEN 40 AND 90°F (5 AND 30°C).

NOTE:

STANDARD PENN JOHNSON MODULATION SYSTEM WITH DISCHARGE AIR SENSOR AND SELECTION ON MOTOR ELECTRONIC BOARD.

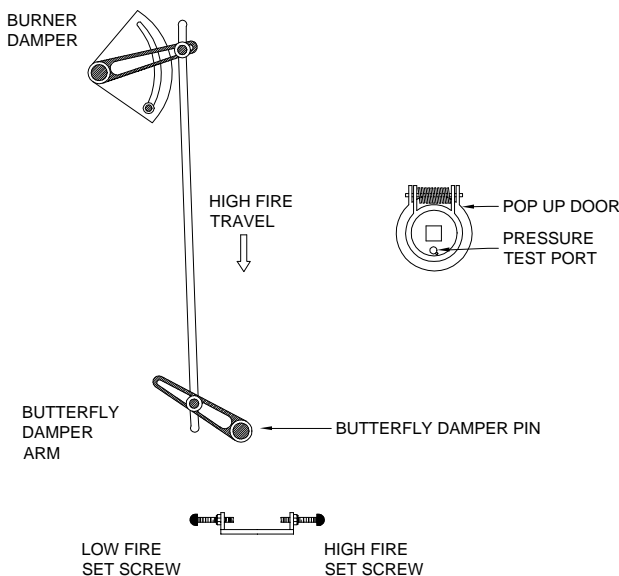



GIDM - LINKAGE SET-UP

LINKAGE OPERATION (GRAVITY VENT)


1. INSTALL A MANOMETER ON POSITIVE AT TEST PORT IN POP-UP DOOR.
 - A) INSURE THERE IS A PRESSURE AT THAT POINT ON LOW FIRE THROUGH TO HIGH FIRE. MAXIMUM 1.50" W.C.
2. TO INCREASE EXHAUST MOVE DRIVE ROD TOWARD DAMPER PIN (DECREASE THE DISTANCE BETWEEN DRIVE ROD AND CENTER PIN.)
3. TO INCREASE COMBUSTION AIR MOVE DRIVE ROD TOWARDS CENTER PIN (DECREASE THE DISTANCE BETWEEN DRIVE ROD AND CENTER PIN).
4. TO INSURE A POSITIVE PRESSURE THROUGHOUT FULL MODULATION RANGE, YOU MAY HAVE TO SPEED UP EXHAUST AND OR BURNER DAMPER TO MATCH GAS FLOW TO THE BURNER.
MOVE DRIVE ROD CLOSER TO THE DRIVE PIN ON THE BUTTERFLY VALVE. (THIS WILL REDUCE THE MOVEMENT OF THE BURNER DAMPER)
5. ADJUST LOW AND HIGH FIRE ON THE STOP SCREWS ON THE BUTTERFLY VALVE.

NOTE:

THE MOTOR IS ALLOWED TO OVER RUN WITH THE SPRINGS LINKAGE SET THE TRAVEL ON THE PENN JOHNSON MOTOR TO INSURE IT DOES NOT GO TO FAR OR DAMAGE TO THE MOTOR COULD OCCUR.

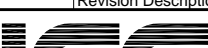				TITLE			
				GIDM GRAVITY VENTED LINKAGE OPERATION			
Rev	By	Revision Description		Date			
				DRAWN BY	ISSUED BY	SCALE	DRW. NO.
				JV		1:1	FIG. V
				CHK. BY	DATE	JOB NO.	REV
					JULY 1/98		-

POSITION OF THE IGNITION ELECTRODE FOR STRAIGHT GAS BURNERS, USING A FLAT DIFFUSER PLATE.

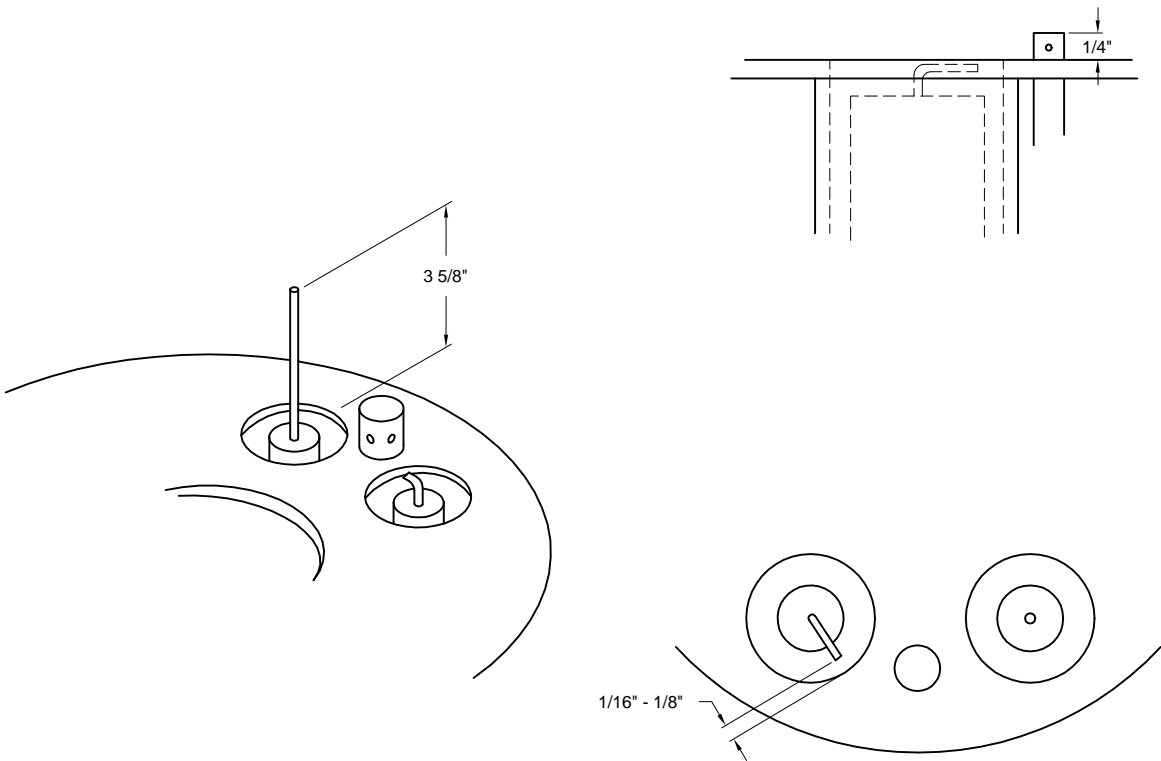




IGNITION ELECTRODE:

THE IGNITION ELECTRODE IS POSITIONED AS SHOWN, WITH THE HORIZONTAL PART OF THE ELECTRODE FLUSH WITH THE DIFFUSER PLATE, LEAVING A GAP OF 1/16" TO 1/8" WIDE. THE POINTING DIRECTION OF THE ELECTRODE IS AS SHOWN, BUT IS NOT CRITICAL.

FLAME SENSOR:

THE FLAME SENSOR SHOWN IS A RECTIFICATION- OR FLAME ROD. A UV SCANNER CAN BE USED INSTEAD. IN THAT CASE THE SCANNER TUBE IS POSITIONED IN THE SAME HOLDER AS THE FLAME ROD.

				TITLE			
				POSITIONING OF THE IGNITION ELECTRODE FOR STRAIGHT GAS BURNER, USING A FLAT DIFFUSER PLATE.			
Rev	By	Revision Description		Date			
				DRAWN BY	ISSUED BY	SCALE	DRW. NO.
				JV		1:1	FIG. VI
CHK. BY	DATE			JOB NO.	REV		
	JULY 13/98				-		

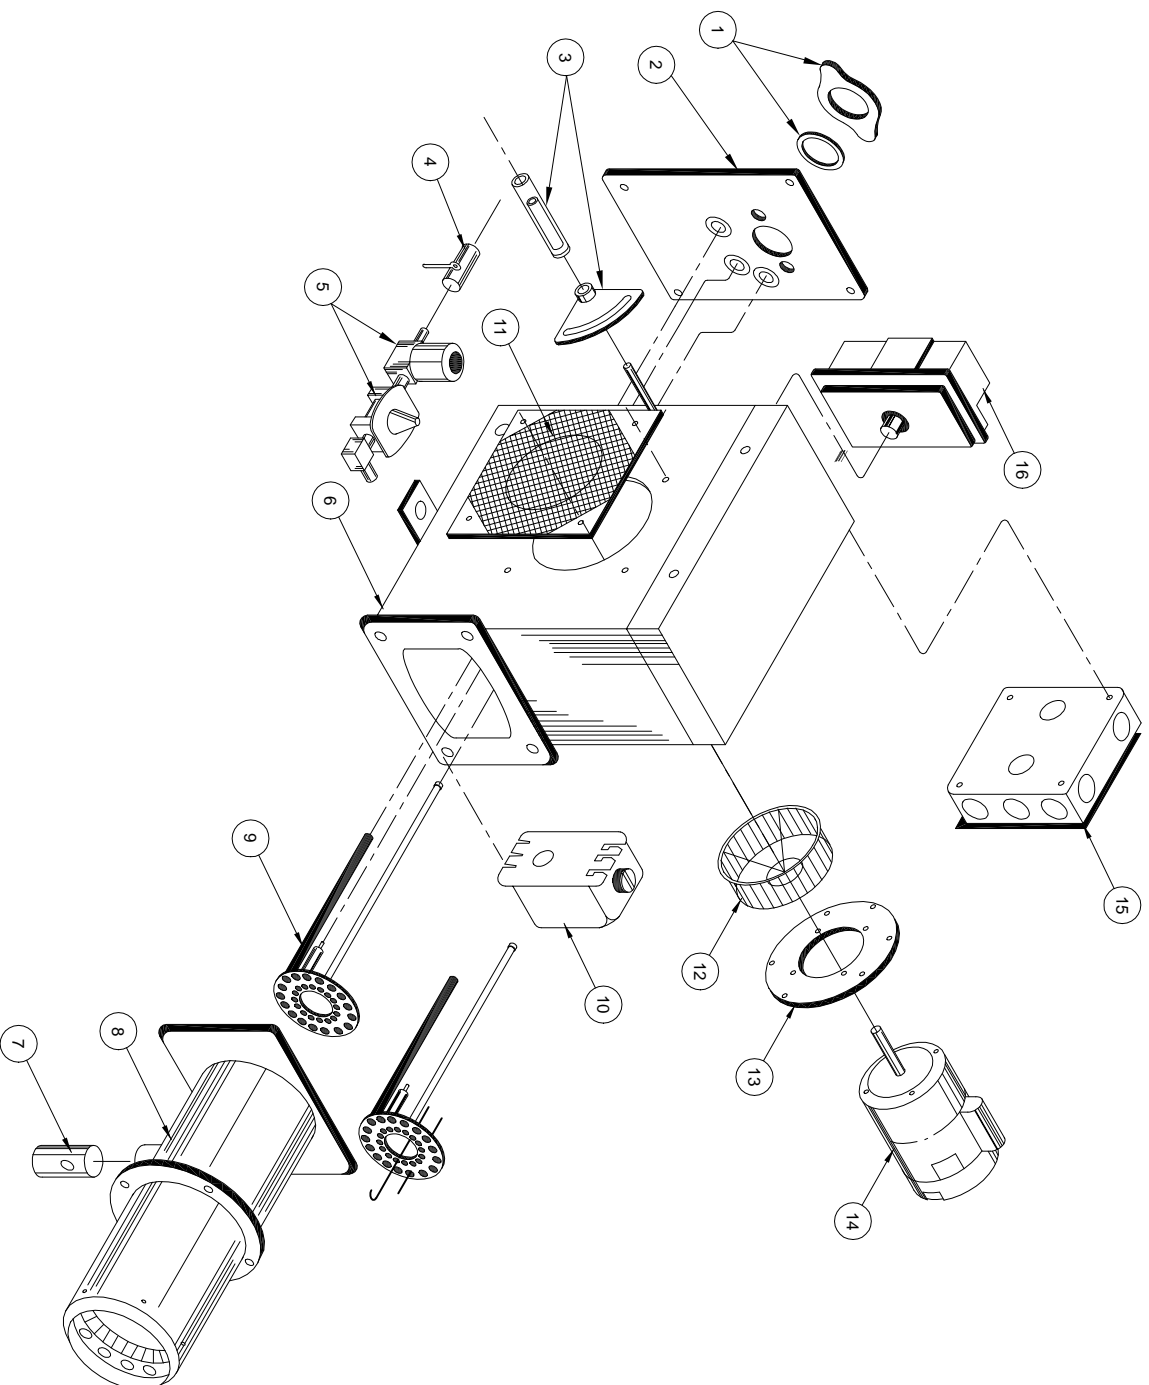


- 1 SIGHT GLASS & SEAL
- 2 REAR COVER PLAT
- 3 DAMPER CONTROL
- 4 PILOT SHUT OFF VALVE
- 5 PILOT REGULATOR & SOLENOID
- 6 FAN BOX
- 7 GAS LINE IN/ORIFACE LOCATION
- 8 FIRING TUBE
- 9 PILOT, IGNITOR AND SENSOR ASSEMBLY
- 10 IGNITION TRANSFORMER
- 11 MESH SHIELD AND INLET ORAFICE
- 12 BLOWER WHEEL
- 13 MOTOR MOUNTING PLATE
- 14 MOTOR
- 15 ELECTRICAL BOX
- 16 AIR PROVING SWITCH


ICG
GIDM
SERIES

TITLE
TYPE C TURBO RING FORCED DRAFT BURNER



DRAWN BY VC	ISSUED BY	SCALE 1:1	DRW. NO. FIG VII	REV
CHK. BY	DATE 7/21/98		JOB NO.	

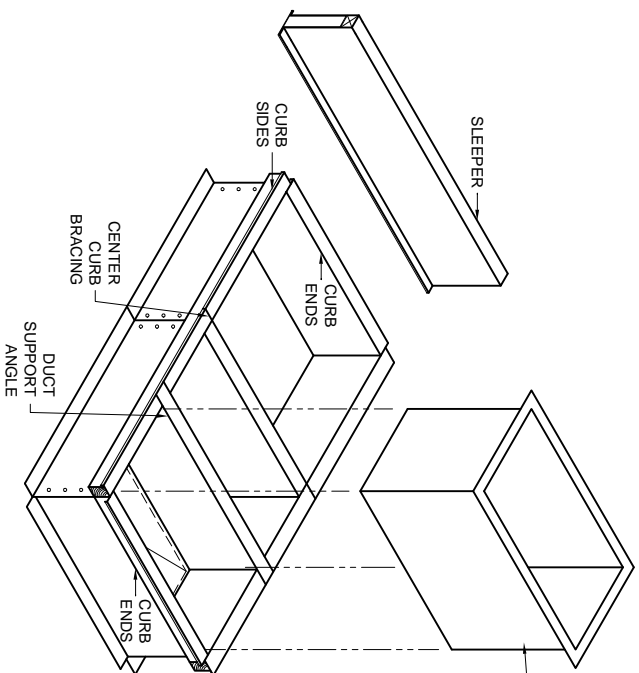

ONE EXAMPLE OF CURBING

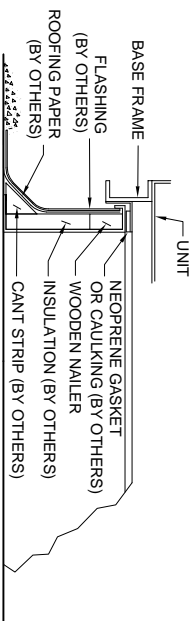


ROOF CURB DETAIL

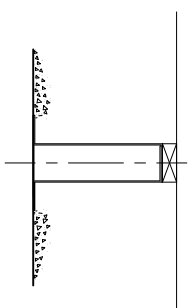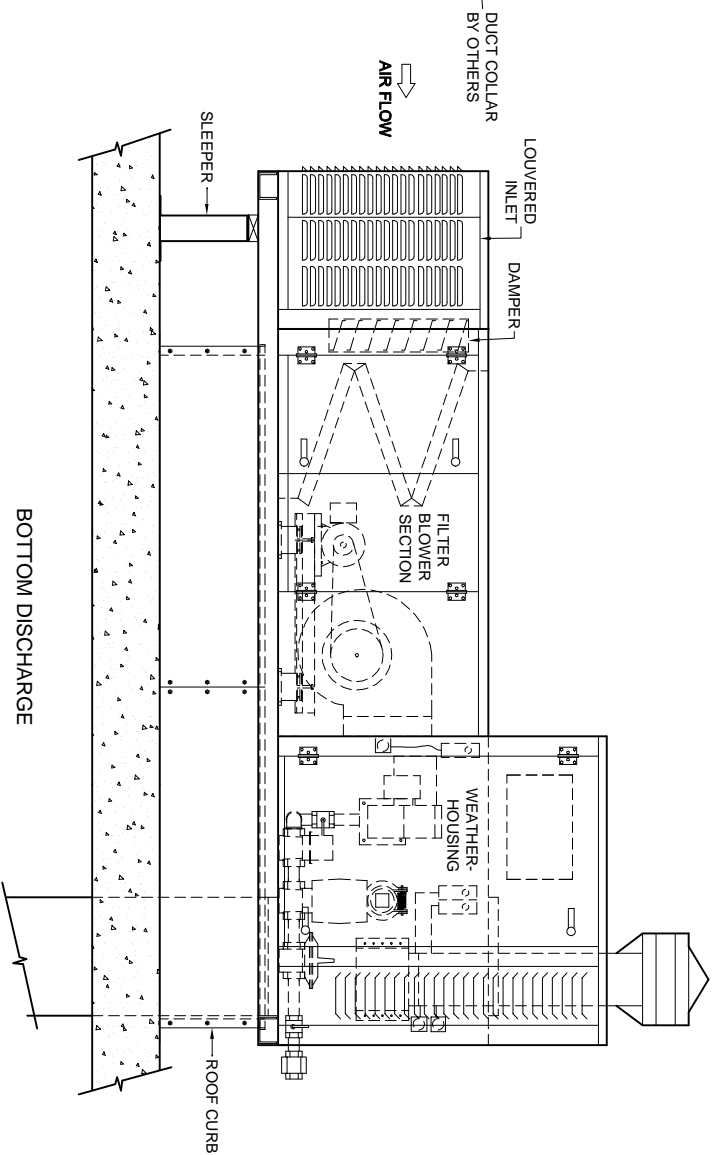

SLEEPER DETAIL
MATERIAL = 16 GA. CB.

- 1 LARGE SLEEPER SIDE
- 2 SMALL SLEEPER SIDE
- 3 END PLATE
- 4 BASE PLATE

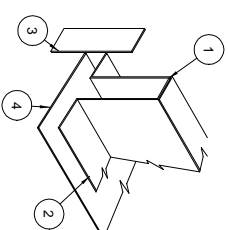

SLEEPER ASSEMBLY

TITLE



INDIRECT GAS FIRED MAKE-UP AIR HEATERS
ROOF CURB AND SLEEPERS DETAILS

ICC
GIDM
SERIES

DRAWN BY	ISSUED BY	SCALE	DRW. NO.	REV
CHK. BY	DATE	NTS.	FIG. VIII	-
MAR. 6/2000			JOB NO.	

TYPE C TURBO-RING FORCED DRAFT BURNERS

USING GAS AND LIGHT OIL - MECHANICAL PRESSURE ATOMIZATION

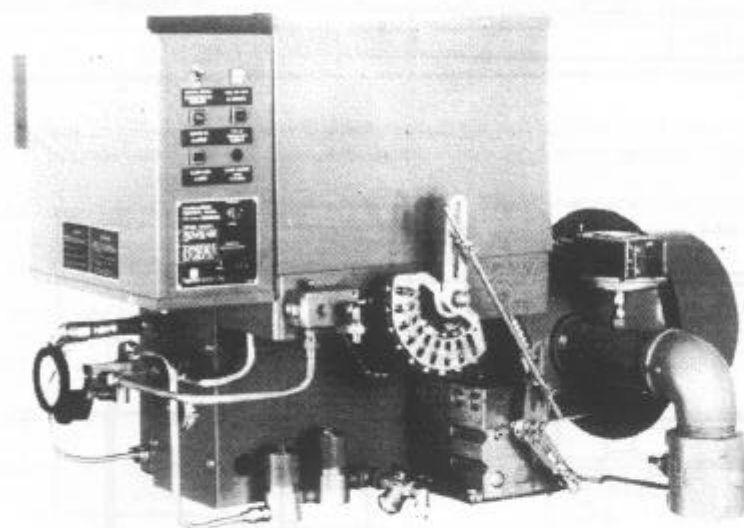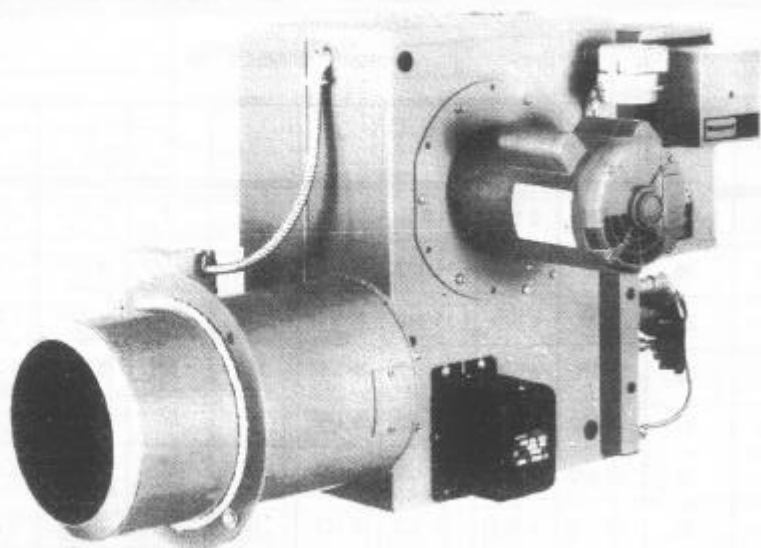

Typical Gas-Oil
Burner Shown

Construction Methods and Appearance May Differ on Some Models

Burner Numbering System

C - 10.8 - GO - 10 - XXXX - H.20 - F4H

Burner Type _____ Oil Control System _____
 Burner Size _____ Gas Train Size _____
 Fuel (Gas - Oil) _____ Gas Control System _____
 Blower Motor HP (1.0 HP) _____ Flame Safeguard Control _____

NOTICE

This Burner instruction manual should be kept with other literature on your boiler room equipment as a complete reference source for maintenance and service. It contains information intended to support the following functions:

1. General Installation
2. Start-up
3. Service

Specific installation requirements and instructions should always be covered in appropriate engineering drawings and/or specifications which detail the applicable building codes, etc. Information contained herein is to be used as a guide **ONLY** and not as the final authority.

WARNINGS

Improper servicing of this equipment may create a potential hazard to equipment and operators.

SERVICING MUST BE DONE ONLY BY FULLY TRAINED AND QUALIFIED PERSONNEL

Before disconnecting or opening up a fuel line and before cleaning or replacing parts of any kind:

- Turn **OFF** the manual fuel shutoff valves including pilot gas cock, if applicable. If a multiple fuel burner, shut **OFF** all fuels.
- Turn **OFF** all electrical disconnects to the burner and any other equipment

FOR YOUR SAFETY

If you smell gas:

1. Open windows.
2. Don't touch electrical switches.
3. Extinguish any open flame.
4. Immediately call your gas supplier.

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

Included herein are various pieces of manufacturer's literature covering the more complex pieces of equipment.

Manufacturer's literature is not included on commonplace hardware or on components which are not field repairable. These items should be replaced if a malfunction occurs.

GAS PIPING:

The gas control size furnished and the minimum gas pressure required at the inlet to the controls is shown in the Burner Material List contained in the manual shipped with the burner.

Gas piping should be sized to provide the required minimum pressure at the main manual shutoff when operating at the maximum input. Consult your local utility on any questions regarding gas pressure, piping pressure drop allowable and local piping requirements.

Gas piping should be installed in accordance with the installation code for gas burning appliances and equipment, CAN/CGA-B149, and any other local codes which may apply. All gas piping shall be tested after installation with air pressure or inert gas in accordance with the above mentioned code. The installer shall identify the main manual shut-off valve.

CAPACITY OF PIPE - NATURAL GAS (CFH)

Pipe Length in Feet	Pipe Size - Inches (IPS)								
	1/2	3/4	1	1-1/4	1-1/2	2	2-1/2	3	4
10	132	278	520	1050	1600	3050	1800	8500	17500
20	92	190	350	739	1100	2100	3300	5900	12000
30	73	152	285	590	899	1650	2700	4700	9700
40	63	130	245	500	760	1450	2300	4100	8300
50	56	115	215	440	670	1270	2000	3600	7400
60	50	105	195	400	610	1150	1850	3250	6800
70	46	98	180	370	560	1050	1700	3000	6200
80	43	90	170	350	530	990	1600	2800	5800
90	40	84	160	320	490	930	1500	2600	5400
100	38	79	150	305	460	870	1400	2500	5100
125	34	72	130	275	410	780	1250	2200	4500
150	31	64	120	250	380	710	1130	2000	4100
175	28	59	110	225	350	650	1050	1850	3800
200	26	55	100	210	320	610	980	1700	3500


NOTE: Use multiplier at right for other specific gravities and pressure drops.

**SPECIFIC GRAVITY
OTHER THAN 0.60**

Specific Gravity	Multiplier
0.50	1.10
0.60	1.00
0.70	0.925
0.80	0.867
0.90	0.817
1.00	0.775
Propane - Air	
1.10	0.740
Propane	
1.55	0.622
Butane	
2.00	0.547

PRESSURE DROP
OTHER THAN 0.3"

Pressure Drop	Multiplier
0.1	0.577
0.2	0.815
0.3	1.00
0.4	1.16
0.6	1.42
0.8	1.64
1.0	1.83
2.0	2.58
3.0	3.16
4.0	3.65
6.0	4.47
8.0	5.15

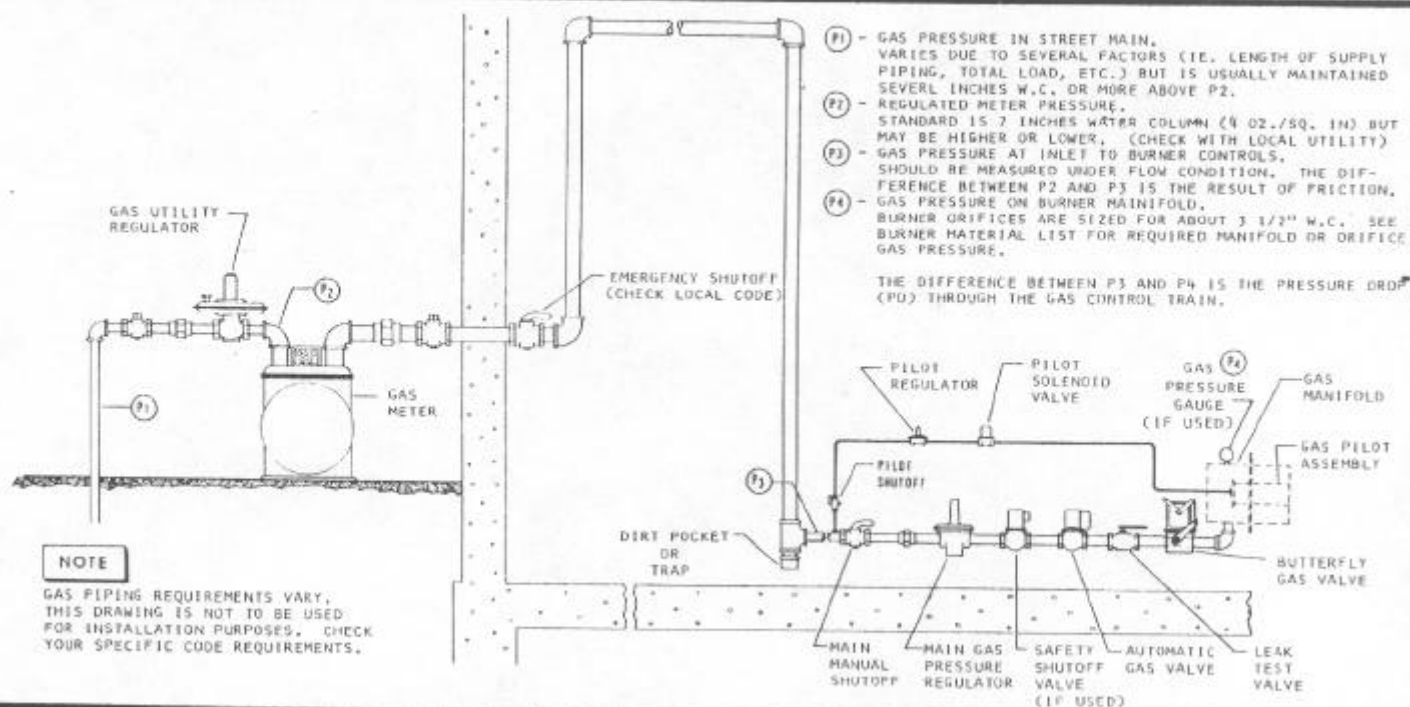

TYPICAL GAS PIPING INSTALLATION

CAUTION: ONLY TRAINED PROFESSIONALS ARE ALLOWED TO HANDLE THIS EQUIPMENT

HEATER SERIAL #	HEATER MODEL	FACTORY JOB	B.U.T.H.	
			HI	
			LOW	

FLAME TEST REPORT	BURNER MODEL	FUEL	ORIFICE SIZE	SUPPLY PRESSURE "W.C.
		GAS MANIFOLD PRESSURE ("W.C.)	OVER FIRE DRAFT ("W.C.)	TOTAL PRESSURE ("W.C.)
	HI FIRE			
	LOW FIRE			

FOR GRAVITY VENTED UNITS (no Induced Draft Fan)

ADD MANIFOLD PRESSURE AND OVER FIRE DRAFT AT PUFF DOOR TO OBTAIN CORRECT MANIFOLD PRESSURE READING. FOR EXPAMPLE, IF GAS MANIFOLD PRESSURE MUST BE 2.6" W.C. AND OVER FIRE DRAFT IS +0.35" W.C., THE CORRECT TOTAL PRESSURE AT THE GAS MANIFOLD TEST PORT WOULD BE 2.95" W.C.

FOR POWER VENTED UNITS (with Induced Draft Fan)

SUBTRACT OVERFIRE DRAFT FROM THE MANIFOLD PRESSURE READING TO OBTAIN THE CORRECT PRESSURE READING, i.e., MANIFOLD READING IS 3.4" W.C., OVERFIRE DRAFT IS -0.1" W.C., SO THE ACTUAL MANIFOLD PRESSURE WOULD BE $3.4 - (-0.1) = 3.5$ " W.C.

FLAME SIGNAL	mA	Vdc	FLUE GAS	CO (P.P.M.)	CO ₂ (%)	O ₂ (%)
HI FIRE			HI FIRE			
LOW FIRE			LOW FIRE			

MOTOR TEST REPORT		HP	KW	V	PH	HZ	FLA	TESTED AMPS	BHP
FAN MOTOR	SUPPLY								
BURNER FAN MOTOR									
INDUCED BAN MOTOR									

RATING BTU/H		HI FIRE	LOW FIRE
5 P.S.I. Gas Supply	Seconds on a 10FT ³ Meter		
7" W.C. Gas Supply	Seconds on a 10FT ³ Meter		